

How To Assemble a 3 Foot Pre-Lit Christmas Wreath


With Lights:

1. Arrange on a flat service.
2. **If applicable**, thread red twist tie through center loop of bow. Bring around to back of bow and twist to secure. Attach remaining length of twist tie to wreath frame.
3. Connect the plug from the lights into the plug from the bow and connect this to your extension cord.
4. If your wreath does not light, inspect all internal and external plugs to ensure a sound connection.
5. Fluff and shape the pines to bring out the fullness and beauty of your wreath.


Without Lights:

1. Arrange on a flat service.
Optional Bow: If using a large red bow, securely attach to the wreath frame using the red twist tie provided.
2. Fluff and shape the pines to bring out the fullness and beauty of your wreath.

Specifications
3 Foot Christmas Wreath
300 Tips
Outer Wire Frame Dimensions: 25"
Inner Wire Frame Dimensions: 18"
Outer Tip (branch) Extension: 5.5" per side
Outer Frame + Tip Extension: 36"

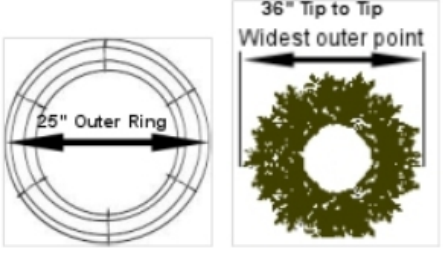

The diagram shows two views of the wreath. On the left, a wire frame is shown with a horizontal double-headed arrow indicating a diameter of 25 inches, labeled '25" Outer Ring'. On the right, a green pine wreath is shown with a horizontal double-headed arrow indicating a diameter of 36 inches, labeled '36" Tip to Tip Widest outer point'.

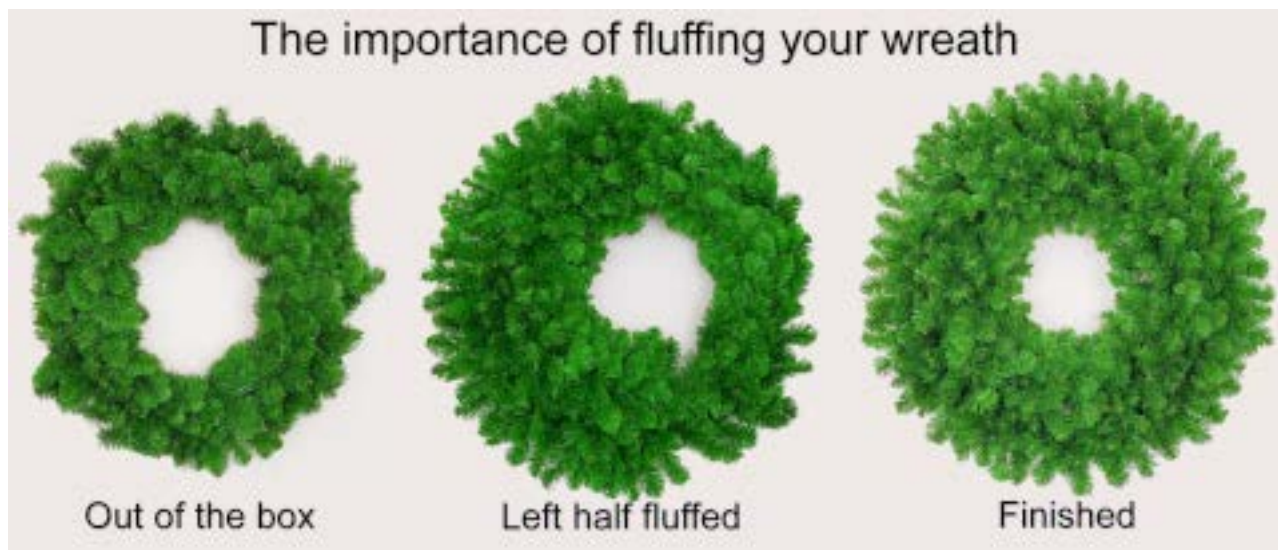

**If you have any questions, please call us at: 732-449-9427.
We're glad to help!**

